TOYOTA Hilux 2013-15 3.0L Turbo Diesel D4-D KUN16/26 (With ABS or VSC) OS-PROV-01

MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

STEP 1: Identify the Install Area / Remove Engine Cover
Unscrew the 5x nuts retaining the intercooler cover and remove

STEP 2: Identify OEM Steel Breather Pipe and remove
Locate breather pipe under intercooler on driver's side of engine block. Remove bolt with 12mm socket and remove from vehicle.

STEP 3: Shorten OEM Steel Breather Pipe
Cut off the welded bracket of the breather pipe (approx.30mm from pipe bend).
Discard the off cut (section with welded bracket).

STEP 4: Insert Breather Pipe in to Supplied 90° Hose
Swivel into position. Return 'Ribbed End' of pipe in to rubber fitting.

STEP 1:

STEP 2:

STEP 3:

STEP 4:

TOYOTA Hilux 2013-15 3.0L Turbo Diesel D4-D KUN16/26 (With ABS or VSC)

STEP 5: Rotate Provent Inlet in to correct position
Fit Drain Hose to Base of Provent - secure with hose clamp, feed hose down through engine bay (*ensure Tap is in OFF position).

STEP 6: Fit Provent to Bracket - required bolts, nuts & washers supplied.
Fit Bracket Over ABS Bollts. Remove bolts holding ABS unit, place bracket over bolts, return nuts.

STEP 7: Provent Lower Outlet to Air Intake
:: Use the flanged end of 90° hose (with steel pipe)
:: Attach to Provent's Lower Outlet (from Air Intake)
:: Secure with hose clamps.

STEP 8: Provent Top Inlet to Crank Case
:: Attach flanged end of straight hose to Provent's Top Inlet
:: Attach other end to the OEM hose from the Crank Case Outlet
:: Secure with supplied hose clamps.

STEP 9: Cable tie hoses to avoid rubbing where necessary.

STEP 10: Replace the plastic engine cover. Job done !

View Install Slide Presentation: SCAN QR-CODE (page.1)

STEP 5:

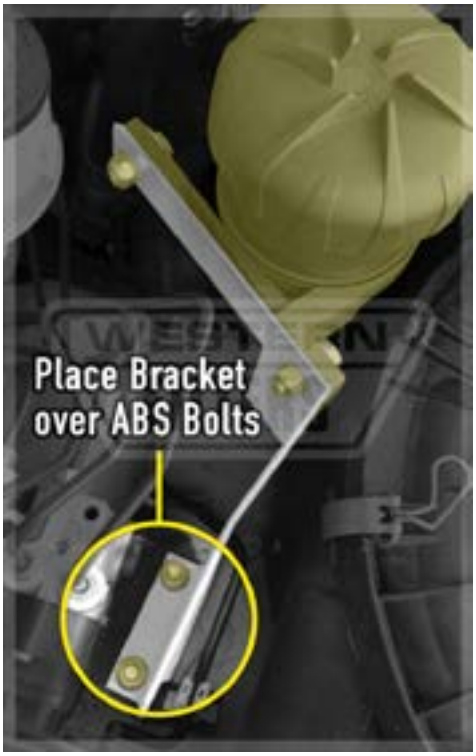

STEP 6:

STEP 7:

STEP 8: