

Mitsubishi Triton ML MN & Challengers 2.5L DI-D 4D56 CDR

OS-PROV-05-4WD



## MANN Provent 200 IV Oil Catch Can Kit Install Guide

**CAUTION: \*\* Ensure the engine is OFF & COOL before installation ! \*\***

**STEP 1:** Remove the Engine Cover.

**STEP 2:** Adjust Provent Inlets to displayed position. Fit Drain Hose to the base of the Provent 200. Tighten hose clamp.

**STEP 3:** Fit Provent to Bracket. Identify existing bolt holes & fit the Bracket

**STEP 4:** Feed the Drain Hose down between the inner guard & chassis rail. Within the wheel arch, attach valve tap & secure with supplied clamp.

**\*\* Ensure Hose Tap is CLOSED \*\***




**STEP 1:**



**STEP 2:**



**STEP 3:**

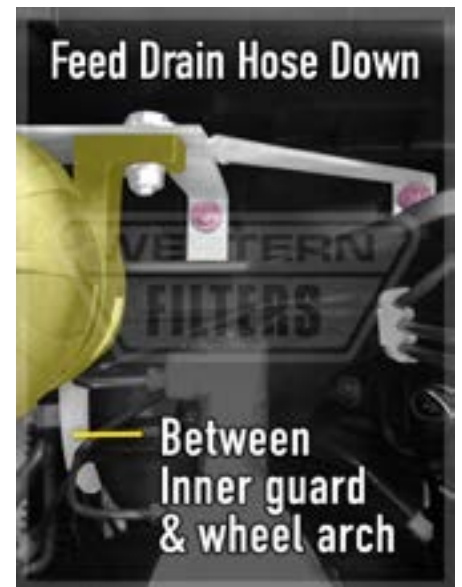

**STEP 4:**

