

Provent Kit for Toyota Landcruiser 70 Series 2007-on 4.5L V8 TD VDJ76 78 79

OS-PROV-30

WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide
For vehicles that have travelled over 80,000 kms we recommend an intake manifold clean !

MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

STEP 1: Identify Install Area (Driver's side, below Power Steering reservoir).

STEP 2: Fit Bracket in place:

- Remove PS Reservoir Fittings - slide Provent Bracket base under
- Return PS Reservoir Fittings - Provent Bracket is now in place.
- Fit supplied Stabilising Strut with supplied bolts (displayed in gold).


STEP 3: Rotate Provent Ports in to position

- Fit Drain Hose to the base of the Provent Unit
- Feed Drain Hose down through the engine bay, inside wheel arch
- Secure with hose clamp & Cable-ties

STEP 4: Fit Provent to Bracket - Secure with hose clamp



STEP 1:

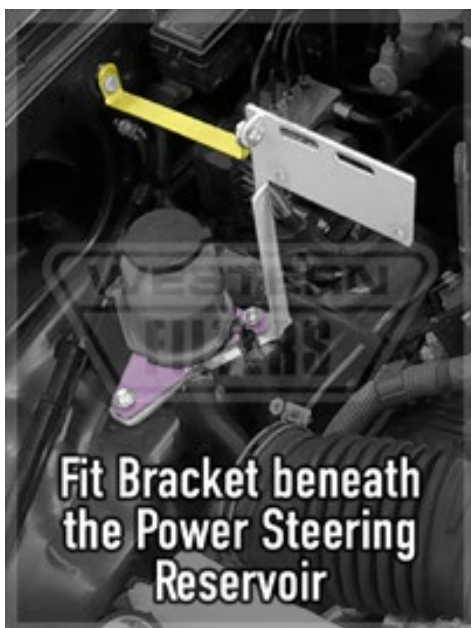

STEP 2:



STEP 3:



STEP 4:

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

- STEP 5:** Remove Factory Hose from between Air Intake & Crankcase Outlet.
- STEP 6:** Attach the supplied Longer Hose to the Air Intake and run back to the Provent Lower Outlet (see below images with Blue Hose). Release the nut holding the OEM Hose Clamp Place the Lower Hose below. Once in position, re-attach Clamp.
- STEP 7:** Attach the other supplied Hose to the Crankcase Outlet Run back to the Provent Top Inlet, placing atop of the Lower Hose (see below images with Gold Hose).
- STEP 8:** Cable-tie hoses to avoid rubbing where necessary. Dust off. Job done !

To View the Install Slide Presentation: [SCAN QR-CODE on page 1 >](#)



STEP 5:



STEP 6:



STEP 7: